

USER GROUP: 2-5 Years

RECOMMENDED CREW: 4 People

TOOLS REQUIRED:

- 1/2" Hex
- Level, Square
- Auger / Post Hole Digger / Shovel
- Drill Bits: None
- High Speed 3/8" Electric Drill with Clutch

NOTE: Use of any other driver may result in damage to tool and/or hardware!

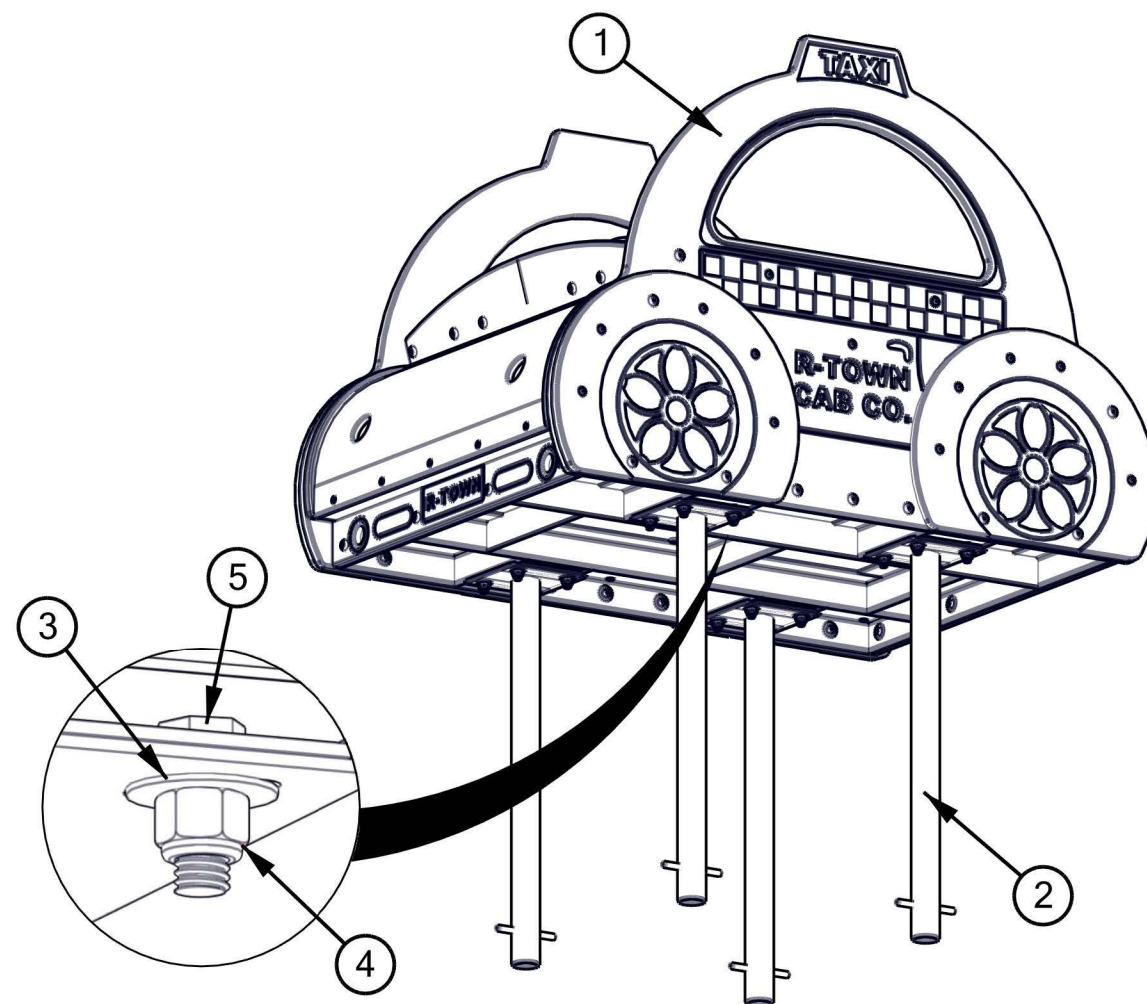
INSTALLATION TIME: 1 Hour

WEIGHT: 471 lbs.

CONCRETE REQUIRED: (8) 80lb. bags

NOTE: Concrete must have a minimum rating of 2,500 psi and must be mixed per manufacturer's recommendations.

ITEM	Part No.	QTY	DESCRIPTION
1	RSA-1081XX	1	Pre-Assem. - R-Town Taxi
2	AFB-41908XX	4	Weldmnt. - Dynamic Vehicle Inground Mount
3	HWWR0022	32	Washer 1/2" ID Flat USS 316 SS
4	HWN0025	16	Nut - 1/2"-13 Nylock 316 SS
5	HWB0578	16	Bolt - 1/2"-13 x 1 1/4" HH SS



PRE-INSTALLATION CHECK:

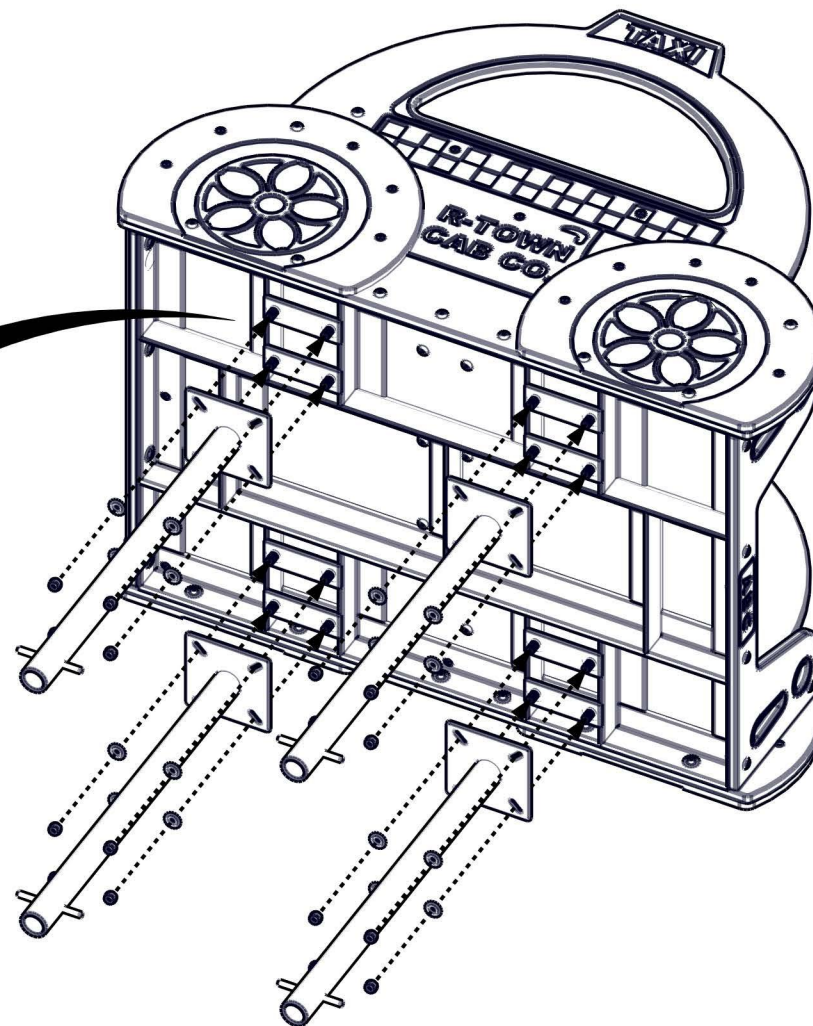
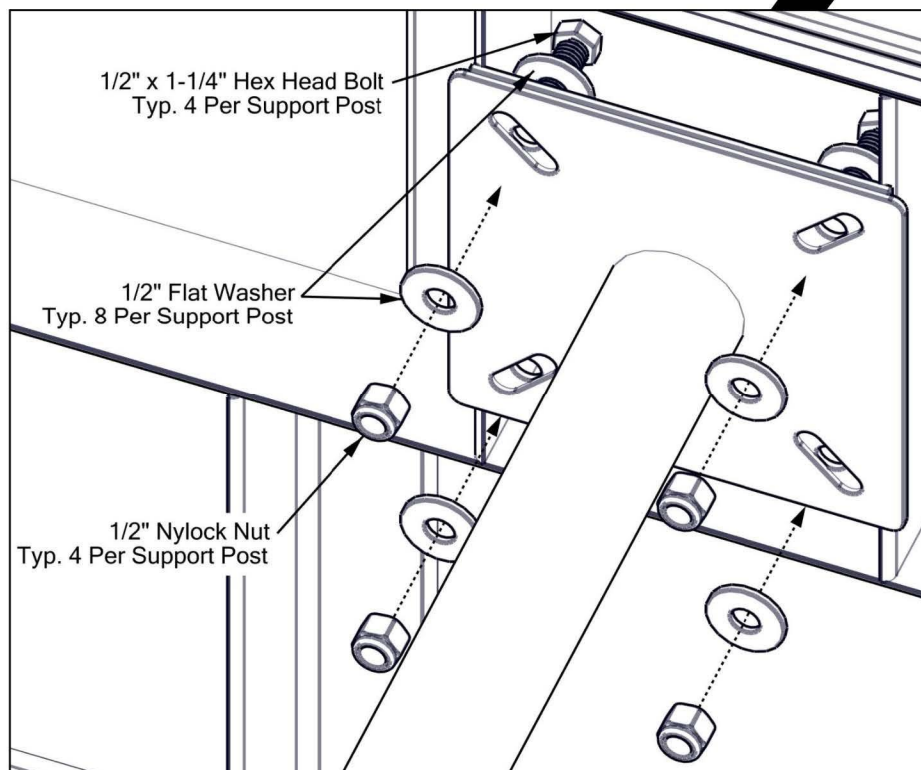
Customer is responsible for verifying materials received by comparing received items with packing list. If any parts are missing or damaged, contact your local sales representative immediately.

Supplier is not responsible for items discovered missing after 72 hours from time of delivery.

Before beginning installation, all installers must read and understand the Installation Introduction manual as supplied. If you did not receive a copy, or if you have any questions regarding any information in the Installation Instructions or this Installation Guideline, contact your local sales representative.

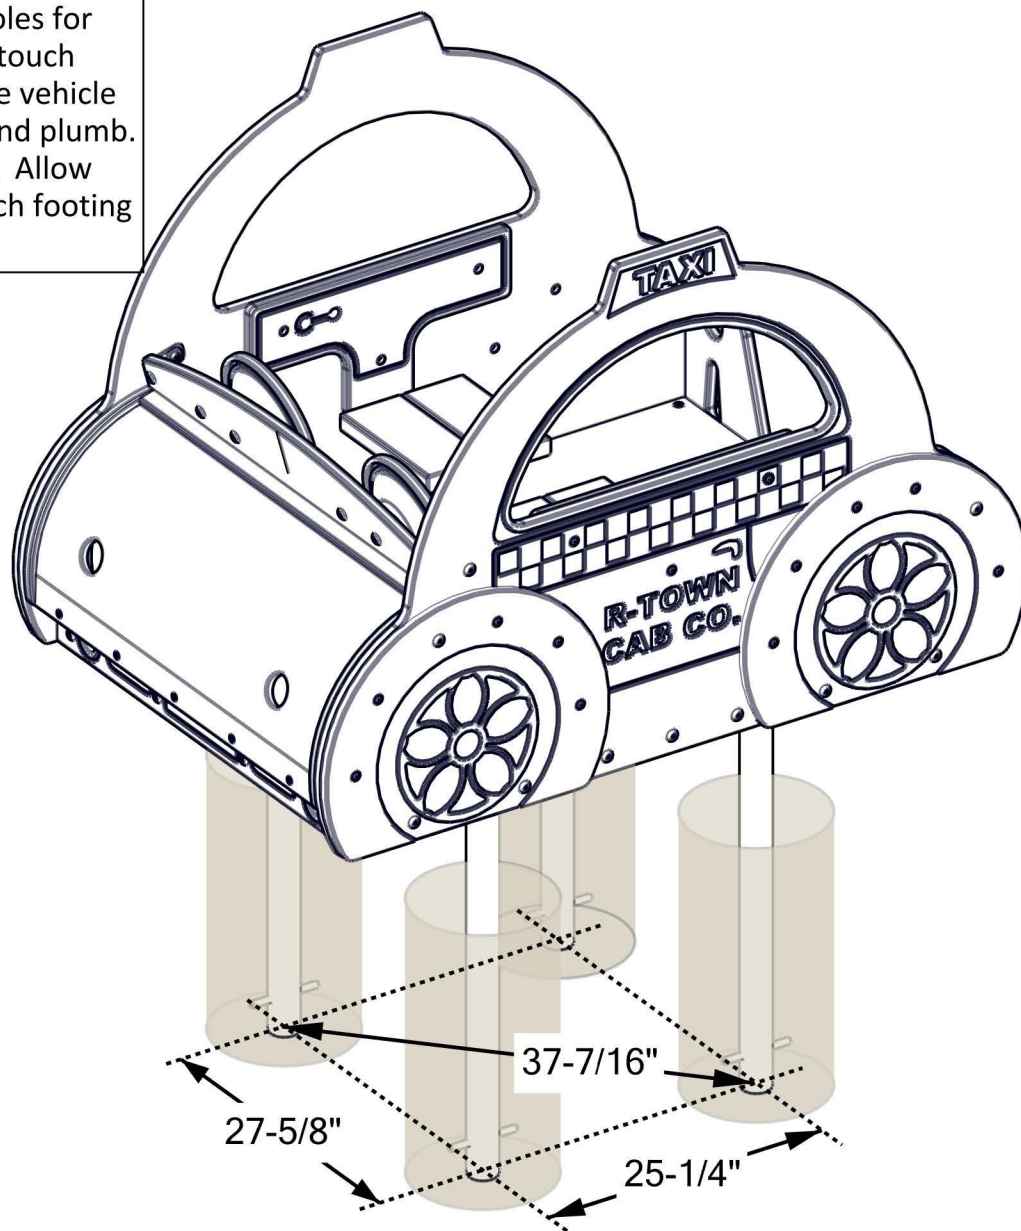
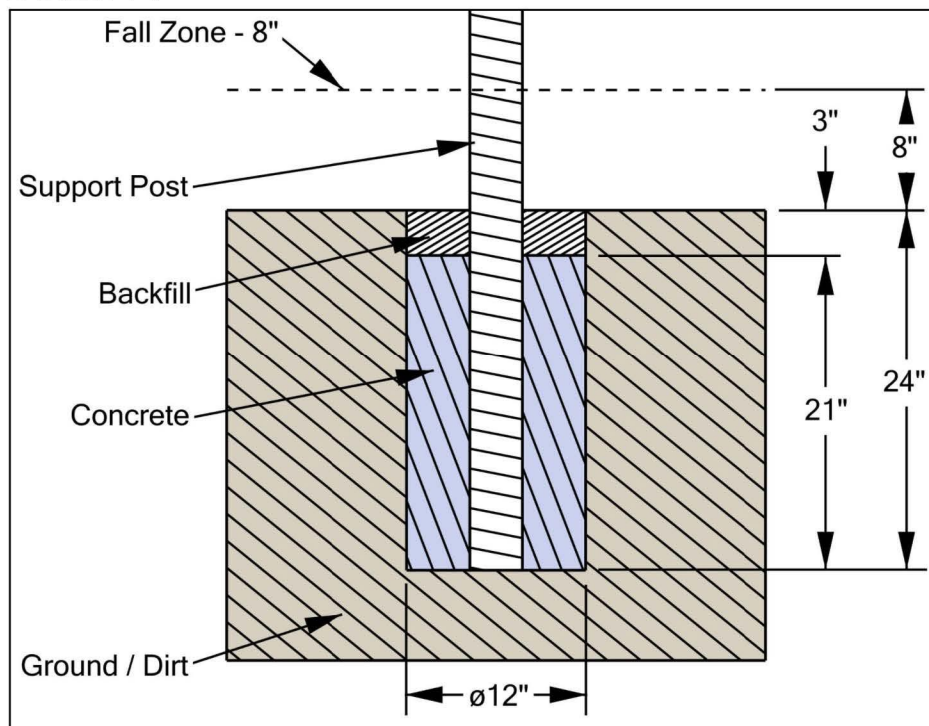
STEP 1

Mount support posts to vehicle frame. Place vehicle on side. Align holes in inground mount with holes in bottom of vehicle frame. Secure each support post with four (4) 1/2" x 1-1/4" hex head bolts, eight (8) 1/2" flat washers, and four (4) 1/2" Nylock nuts. See Detail 1-1. Repeat for each support post.

Detail 1-1

STEP 2

Set support posts. Support post spacing is shown at right. Footing holes for support posts must be 12" diameter and 24" deep. Surfacing should touch bottom of vehicle frame. Cut support posts as needed to accommodate vehicle frame being flush with surfacing. Place assembly into footing holes and plumb. Fill each footing hole with concrete to within 3" from ground surface. Allow concrete to cure based upon manufacturer's instructions. Backfill each footing hole with dirt, flush with grade. See Detail 2-1.

Detail 2-1

STEP 3

Check all connections and ensure structure is stable.
All concrete must be fully cured before use of structure.
Installation is complete.
Place one (1) Age Appropriate Sticker
on structure in a clearly visible location.

