

USER GROUP: 6-23 Months

RECOMMENDED CREW: 1 Person

TOOLS REQUIRED:

- 3/16" Allen, #1 Square (Included)
- Drill Bits: 3/32" (Optional)
- Hand Driver, High Speed 3/8" Electric Drill with Clutch (Optional)
- Hammer / Mallet

INSTALLATION TIME: 1/2 Hour

WEIGHT: 114 lbs.


CONCRETE REQUIRED: None

PRE-INSTALLATION CHECK:


Customer is responsible for verifying materials received by comparing received items with packing list. If any parts are missing or damaged, including documentation, contact your local sales representative immediately.

Supplier is not responsible for items discovered missing after 72 hours from time of delivery.

Before beginning installation, all installers must read and understand the Installation Introduction manual as supplied. If you did not receive a copy, or if you have any questions regarding any information in the Installation Instructions or this Installation Guideline, contact your local sales representative.

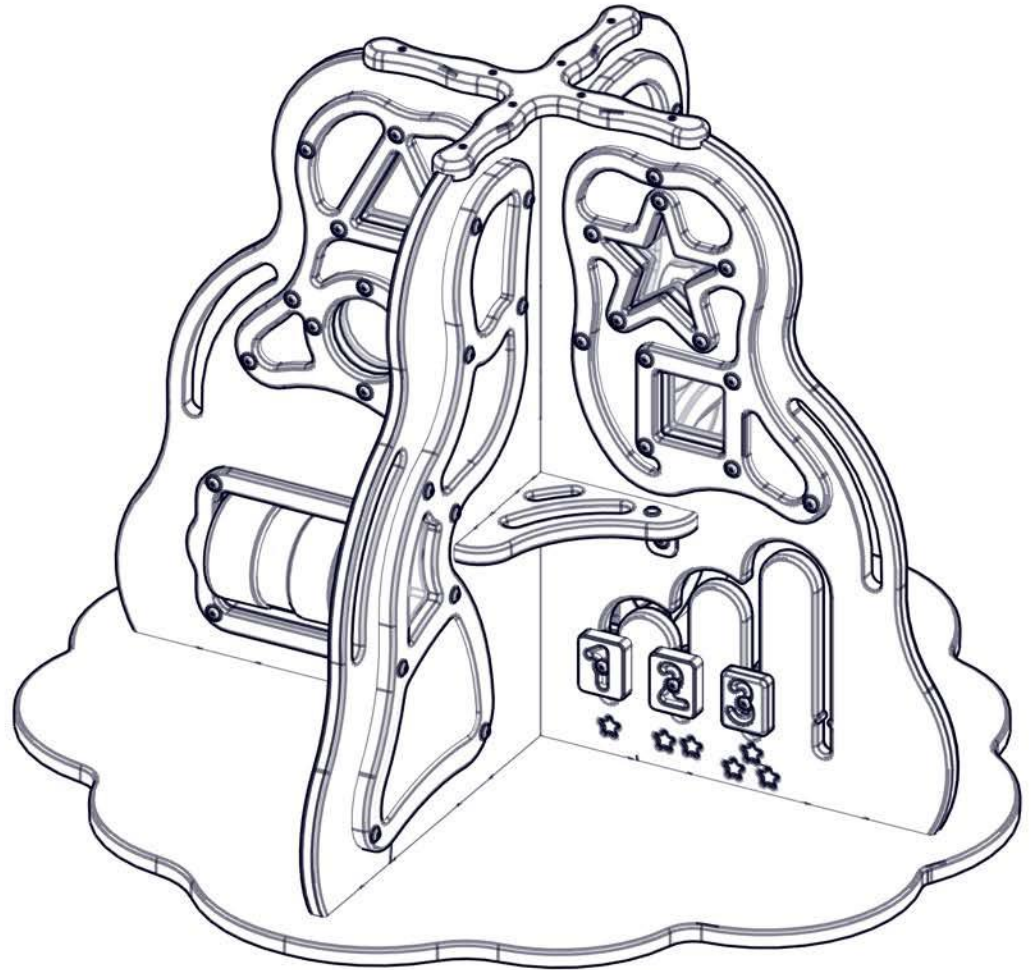


ITEM	Part No.	QTY	DESCRIPTION
1	RSP-4348-11	1	Sheet - Toddler Sensory Tower Base Panel (Spring Green)
2	RSA-1522XX	1	Pre-Assem. - Spinner/Texture/Bead Panel Assy. for Toddler Sensory Tower
3	RSA-1524XX	1	Pre-Assem. - Sound Cylinder/Matching/Window Panel Assy. for Toddler Sensory Tower
4	RSP-4319-10	2	Sheet - Toddler Sensory Tower Hand Grip (Red)
5	RSP-4350-29	1	Sheet - Toddler Sensory Tower Crown Panel (Yellow)
6	BKT-0119-13	2	Bracket - 1 3/4" x 1 3/4" x 1 1/2" with 17/32" Holes (Red)
7	HWB0344	4	Bolt 5/16"-18 x 3/4" BH SS
8	HWWR0114	4	Washer 5/16" ID x 3/4" OD x .05" thick Flat 300 SER
9	HWN0149	4	Nut 5/16"- Zn Insert Type I
10	HWS0105	8	Screw #6 x 1-1/4" Deck SS

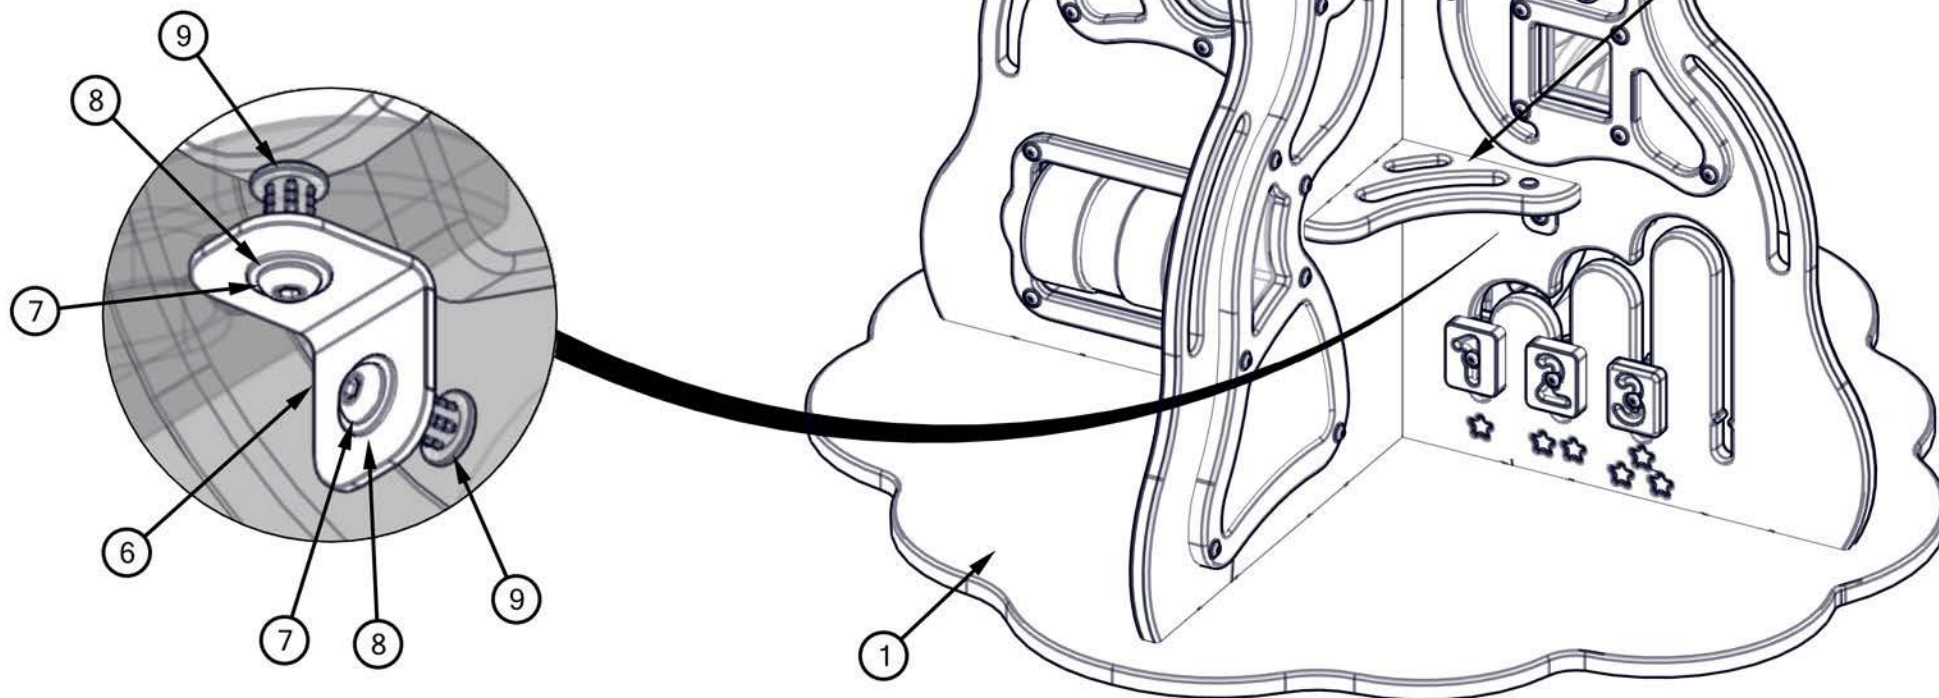


STEP 1

Insert vertical panel with top slot into base panel. Ensure tabs on vertical panel snap into slots on base panel. See Detail 1-1.

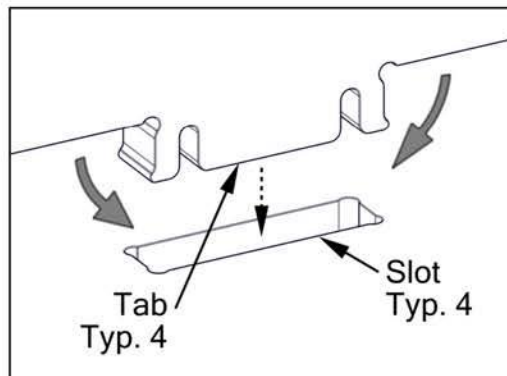Detail 1-1



Vertical Panel
with Top Slot

Base Panel

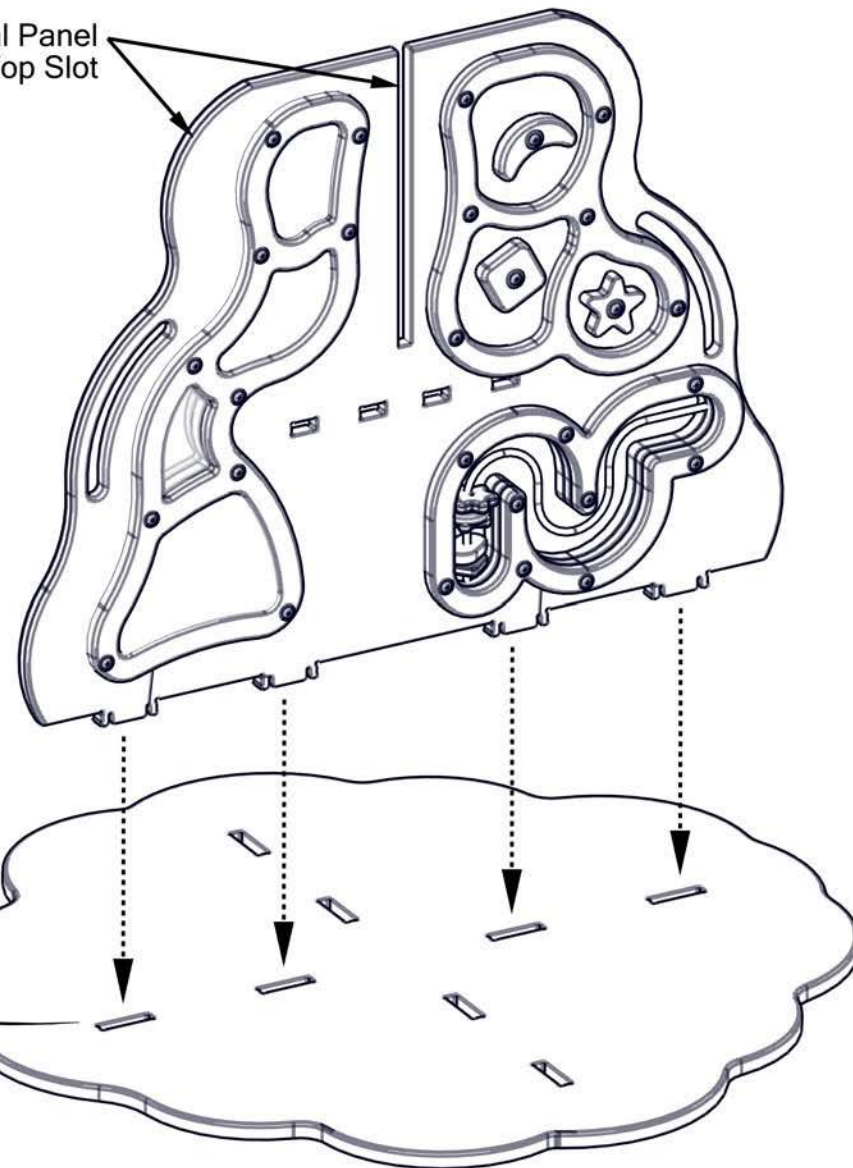


STEP 2

Insert vertical panel with bottom slot into vertical panel slot and base panel. Ensure slots align. Ensure tabs on vertical panel snap into slots on base panel. See Detail 2-1.

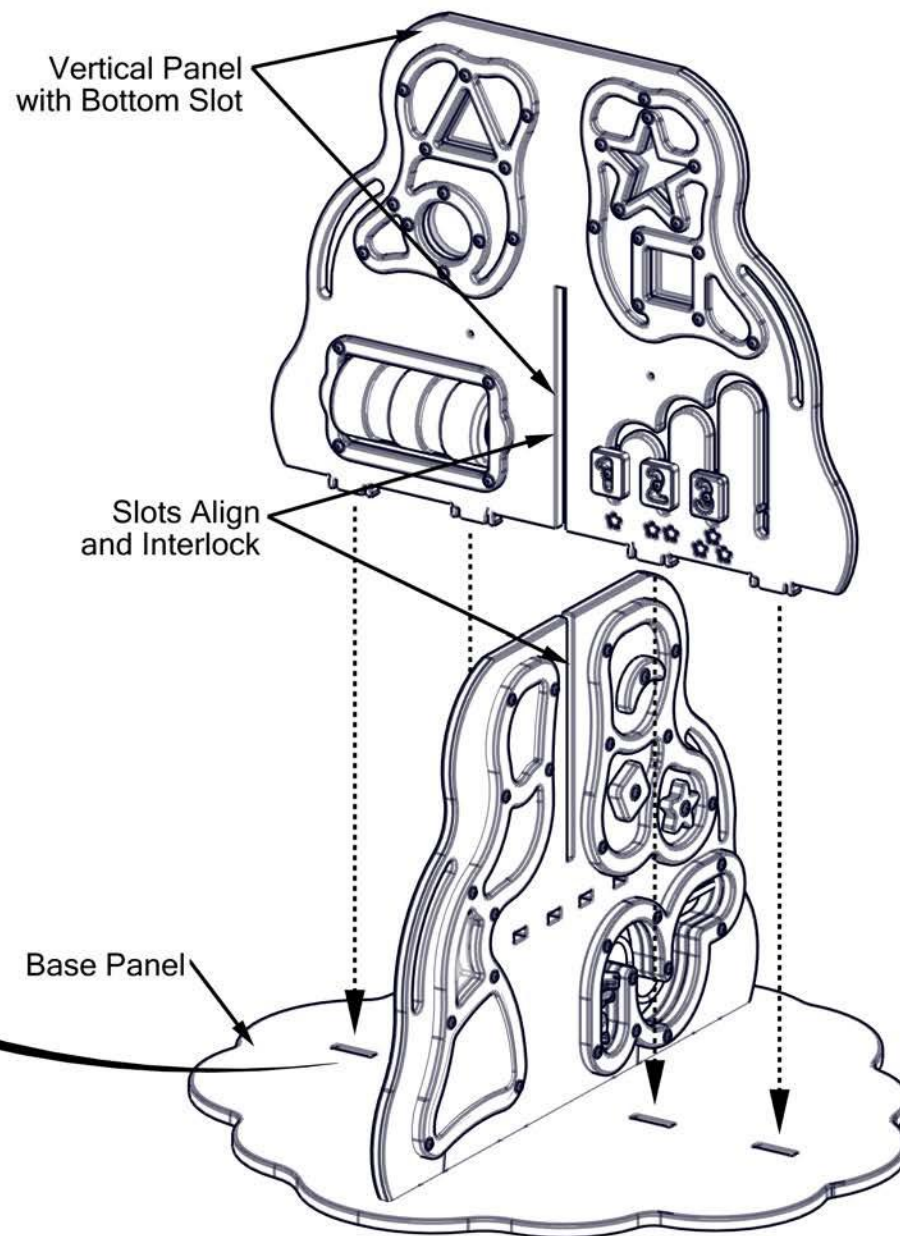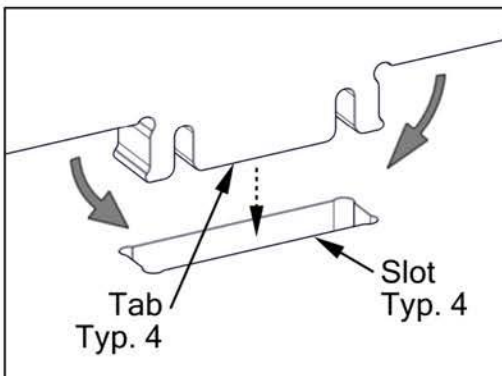Detail 2-1


STEP 3

For each hand grip panel, insert one (1) 5/16" knock-in nut into top of panel.

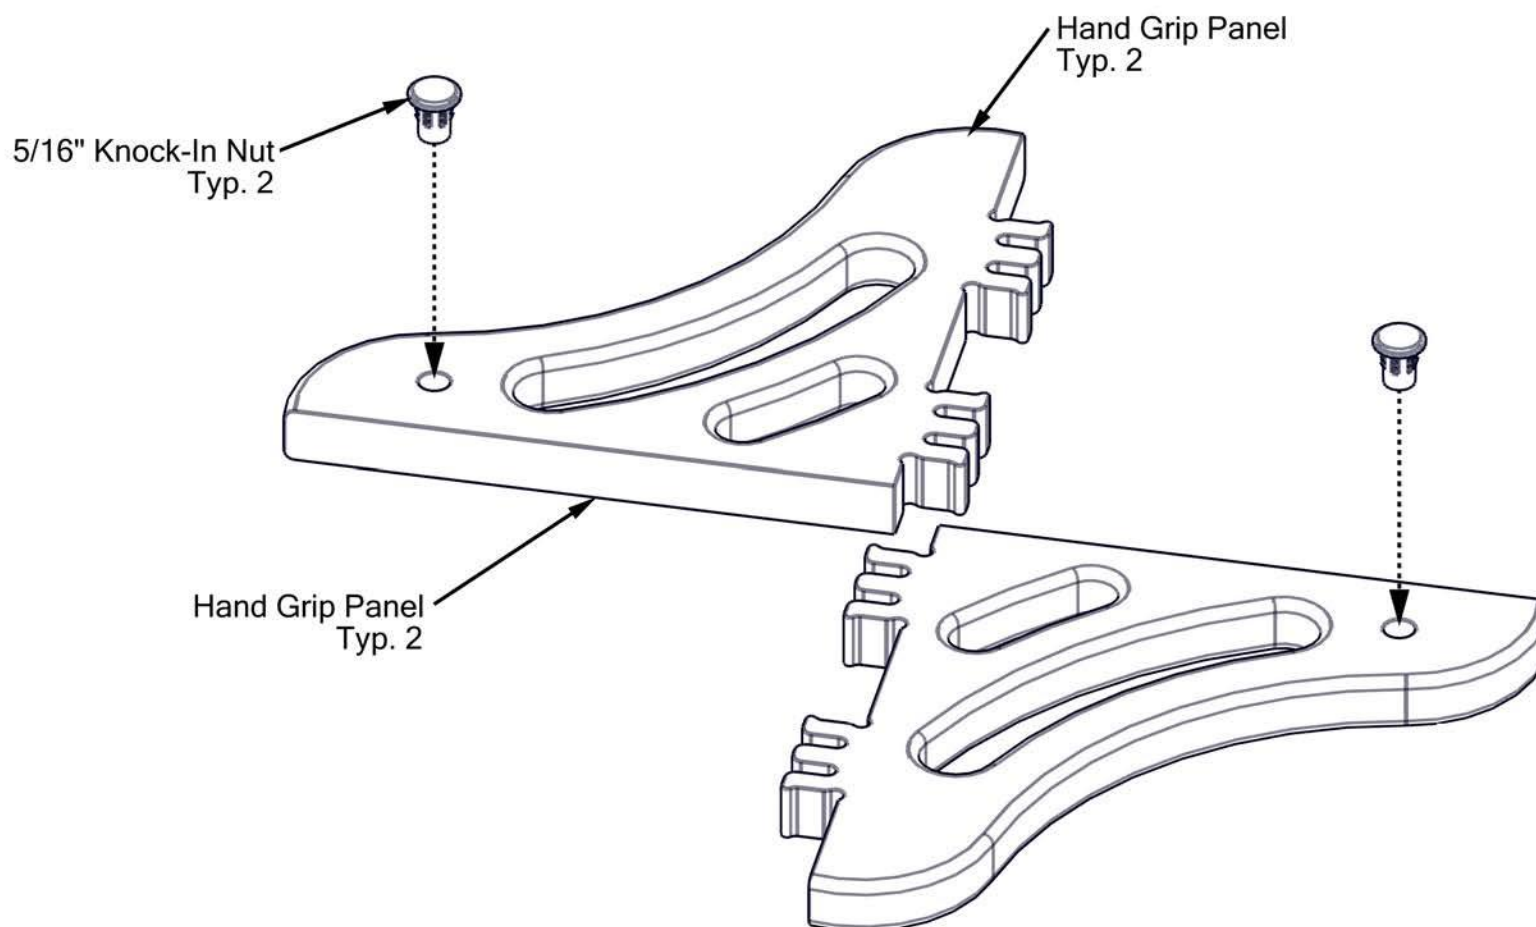



STEP 4

Insert hand grip panel into vertical panel. Ensure tabs on hand grip panel snap into slots on vertical panel. Repeat for opposite hand grip panel.

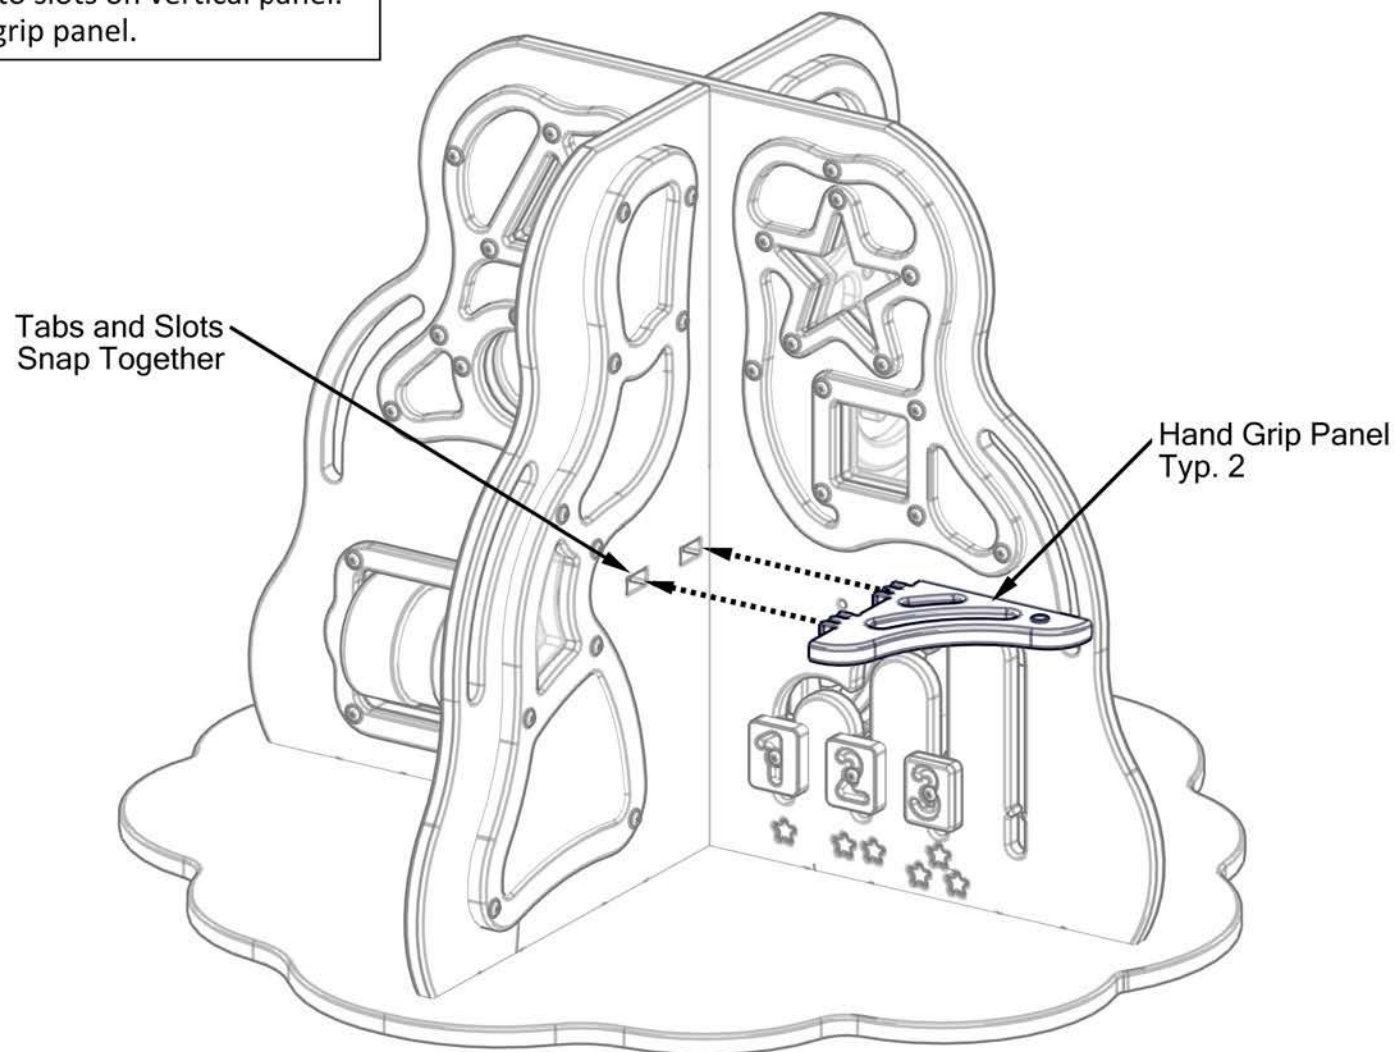

STEP 5

Secure hand grip panels to vertical panels. At opposite side of vertical panel, insert one (1) 5/16" knock-in nut. Align one (1) L-bracket with knock-in nuts in hand grip panel and vertical panel. Secure L-bracket with two (2) 5/16" x 3/4" flat washers and two (2) 5/16" x 3/4" Allen button head screws. See Detail 5-1. Repeat for opposite hand grip panel.

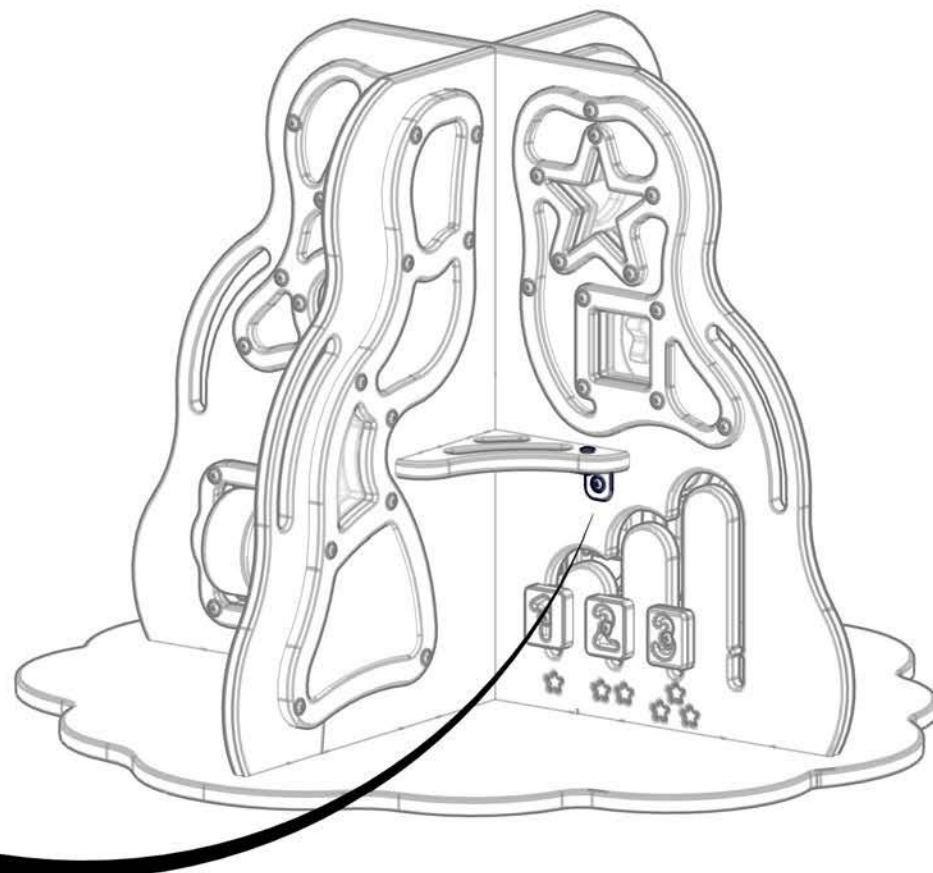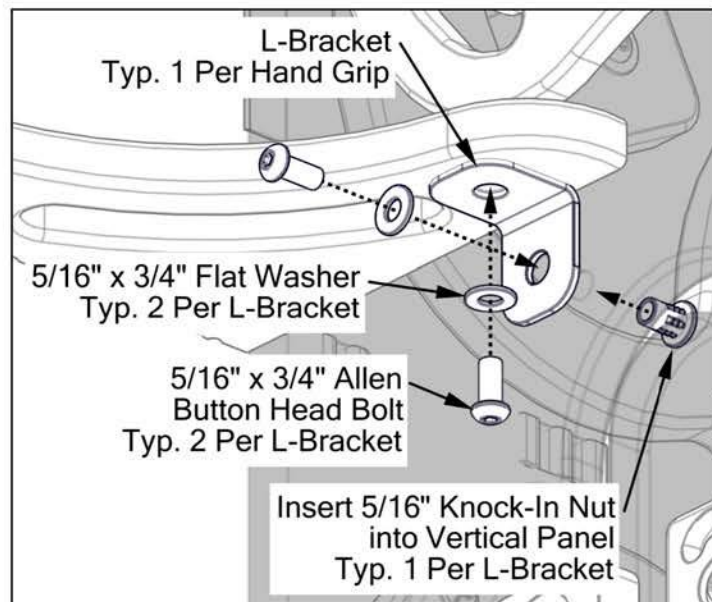Detail 5-1

STEP 6

Mount crown panel to vertical panels. Align slots in crown panel with top edges of vertical panels. Secure crown panel through pre-drilled holes with eight (8) #6 x 1-1/4" deck screws. Optional 3/32" pilot holes can be pre-drilled if needed. Check all connections and ensure structure is stable. Installation is complete.

